

Electromagnetic Flow Meters

ModMAG® M3000

DESCRIPTION

The innovative design of the Badger Meter® ModMAG® M3000 meter represents the next generation of electromagnetic flow meter technology. Incorporating the latest developments in micro processing signal conditioning the advanced design of the M3000 meter allows an accuracy $\pm\,0.20\%$ with a flow range of 300:1. Targeted to a variety of oil and gas, industrial and municipal applications, the M3000 meter is virtually unaffected by density, temperature, pressure, and viscosity changes and provides an accurate and reliable long term metering solution. This meter complies with ANSI/NSF Standard 61, Annex G.

OPERATION

The operating principle of the electromagnetic flow meter is based on Faraday's law of magnetic induction: The voltage induced across any conductor, as it moves at right angles through a magnetic field, is proportional to the velocity of that conductor. The voltage induced within the fluid is measured by two diametrically opposed internally mounted electrodes. The induced signal voltage is proportional to the product of the magnetic flux density, the distance between the electrodes and the average flow velocity of the fluid.

ELECTRODES

When looking from the end of the meter into the inside bore, the two measuring electrodes are positioned at three o'clock and nine o'clock. As a conductive fluid flows through the magnetic field, a voltage is induced across the electrodes. This voltage is proportional to the average flow velocity of the fluid and is measured by the two electrodes. This induced voltage is then amplified and processed digitally by the converter to produce an accurate analog or digital signal. The signal can then be used to indicate flow rate and totalization or to communicate to remote sensors and controllers.

M3000 meters also have an "empty pipe" detection feature. This is accomplished with a third electrode positioned in the meter between twelve o'clock and one o'clock. If this electrode is not covered by fluid for minimum of five seconds, the meter will display an "empty pipe" condition. When the electrode again becomes covered with fluid, the error message will disappear and the meter will continue measuring.

DETECTOR

The flow meter is a stainless steel tube lined with a non-conductive material. Outside the tube, two DC powered electromagnetic coils are positioned opposing each other. Perpendicular to these coils, two electrodes are inserted into the flow tube. Energized coils create a magnetic field across the whole diameter of the pipe. With the no moving parts, open flow tube design there is no pressure lost and practically no maintenance required.





APPLICATION

The M3000 meter is suited for use in applications where indication of rate and totalization is required. The ability to display flow parameters locally at the flow meter, or remotely by mounting the amplifier up to 100 feet away from the detector, provides a versatile solution for most industrial and municipal flow applications. Whether the fluid is water or something highly corrosive, very viscous, contains a moderate amount of solids, or requires special handling, the meter is able to accurately measure it. Housed in a Class 1, Division 2, NEMA 4X/6P (IP66/IP67) enclosure, the M3000 design has been tested and approved by Factory Mutual (FM) in the United States and the Canadian Standards Association (CSA international) in Canada.

FEATURES


- Sizes 1/4...24 in. (6...600 mm)
- Accuracy of ± 0.20%
- Better than 0.1% repeatability
- Large 4-line by 16-character, back-lit, LCD display
- Digital Signal Processor (DSP) based
- · Bi-directional flow sensing and totalization
- · Automatic zero point stability
- Measures fluids with as low as 5.0 micromhos/cm conductivity
- Empty pipe detection
- No pressure loss for low operational costs
- Long life, corrosion-resistant liners
- · Precise calibration
- NEMA 4X/6P (IP66/IP67) enclosure
- FM approved for Class I, Div 2 hazardous locations
- CE and FCC compliant
- CSA Certified


Product Data Sheet

SPECIFICATIONS

C:	1/4 24 5 (6 (00 5 5 5)										
Sizes Flow Panes	1/424 in. (6600 mm)										
Flow Range	0.1039.4 ft/s (0.0312 m/s)										
Accuracy	± 0.20% of rate ± 1 mm/s										
Repeatability	0.1% of rate										
Power Supply	AC or optional 24V DC AC Power Supply: 85240V AC, 4565 Hz Voltage Fluctuation = ± 10% of nominal Over Voltage = Category II Vower Consumption = 20 W OC Power Supply (optional): 24V DC ± 10% 8 W										
Analog Outputs											
Digital Outputs	2) Open Collector, (programmable – scaled pulse, flow alarm, status, or frequency output) Max. 24V DC, 0.5 W 2) AC solid-state relay (programmable – flow alarm or status) Max. 24V D C @ 0.5 A										
Frequency Output	,	Open Collector; Max. full scale flow = 10 kHz									
Communication	Modbus RTU communications and display for 110/220V AC (P.N. 65778-007) or 24V DC (P.N. 65778-008). Options must be selected at time of order.										
Pulse Width	Open Collector, 5 ms to 1 second	d (programmable) or automatic	50% duty cycle								
Min-Max Flow Alarm	Open collector or solid-state rela	Open collector or solid-state relay (programmable, 0 to 100% of flow)									
Empty Pipe Detection	Field tunable for optimum performance based on specific application										
Excitation Frequency	Programmable, 3.75 Hz, 7.5 Hz or 15 Hz										
Auxiliary Input	Max. 24V DC (programmable – positive zero return, external totalizer reset or preset batch start)										
Noise Dampening	1 to 30 seconds (programmable)										
Low Flow Cutoff	0100% of full scale (programmable)										
Zero-Point Stability	Automatic correction										
Galvanic Separation	500V										
Fluid Conductivity	Min. 5 μS/cm (Min. 20 μS/cm for	demineralized water)									
Fluid Temperature	With Meter-Mounted Amplifier PFA, PTFE & Halar*: -4212° F (temperature of 122° F (50° C). Hard rubber: 32178° F (081' temperature of 122° F (50° C).	-20100° C) @ max. ambient	With Remote Amplifier: PFA, PTFE & Halar: -4248° F (-20120° C) @ max. ambient temperature of 122° F (50° C). Hard rubber: 32178° F (081° C) @ max. ambient temperature of 122° F (50° C).								
Ambient Temperature	– 4122° F (–2050° C)										
Relative Humidity	Up to 90% non-condensing										
Altitude	Maximum 6500 ft (2000 m)										
Flow Direction	Uni-directional or bi-directional										
Totalization	3 separate displayable totalizers	; 10 digits (programmable – forv	ward, reverse and net)								
Units of Measure	acre feet (programmable).	U.S. gallons, imperial gallons, million gallons per day, cubic feet, cubic meters, liters, oil barrels, pounds, ounces,									
LC Display	4-line by 16-character, alphanur Displays: 3 totalizer values, flow		, error/diagnostic messages								
Programming	Internal 3-button or external ma	ignetic wand									
Field Wiring Entry Ports	(3) 1/2 in. NPT, internal thread										
Amplifier Housing	Amplifier enclosure and remote										
Amplifier Housing Rating	Amplifier enclosure and remote	junction enclosure: NEMA 4X/6F	P (IP66/IP67)								
Detector Pipe Spool Material	304 stainless steel										
Detector Spool Housing Material	Carbon steel, welded, NEMA 4X/6P (IP66/IP67)										
Electrode Materials	Alloy C (standard), 316 stainless										
Liner Material		PFA from 1/43/8 in. (610 mm), PTFE from 1/224 in. (15600 mm), hard rubber from 124 in. (25600 mm), Halar from 1224 in. (300600 mm)									
	Carbon steel or 316 stainless steel; In Accordance with ANSI/ASME, B16.5 Class 150 Flange Rating										
Flanges		Pulsed DC									
Coil Power	Pulsed DC										
Coil Power Pressure Limits	Pulsed DC In Accordance with ANSI/ASME,										
Coil Power Pressure Limits Mounting	Pulsed DC In Accordance with ANSI/ASME, Direct detector mount or remot	e wall mount, bracket included.	For remote mount, max. cable distance = 100 ft (30 m)								
Coil Power Pressure Limits Mounting Junction Enclosure Material	Pulsed DC In Accordance with ANSI/ASME, Direct detector mount or remot For remote mounted amplifier of	e wall mount, bracket included. option: Cast aluminum, powder-o	For remote mount, max. cable distance = 100 ft (30 m) coated paint, NEMA 4X/6P (IP66/IP67)								
Coil Power Pressure Limits Mounting Junction Enclosure Material Grounding Ring Material	Pulsed DC In Accordance with ANSI/ASME, Direct detector mount or remot	e wall mount, bracket included. option: Cast aluminum, powder-o									
Coil Power Pressure Limits Mounting Junction Enclosure Material	Pulsed DC In Accordance with ANSI/ASME, Direct detector mount or remot For remote mounted amplifier of	e wall mount, bracket included. option: Cast aluminum, powder-o									
Coil Power Pressure Limits Mounting Junction Enclosure Material Grounding Ring Material	Pulsed DC In Accordance with ANSI/ASME, Direct detector mount or remot For remote mounted amplifier of 316 stainless steel (standard) or	e wall mount, bracket included. option: Cast aluminum, powder-o alloy C									
Coil Power Pressure Limits Mounting Junction Enclosure Material Grounding Ring Material	Pulsed DC In Accordance with ANSI/ASME, Direct detector mount or remote For remote mounted amplifier of 316 stainless steel (standard) or Meter Size 1/410 in. (6250 mm)	e wall mount, bracket included. option: Cast aluminum, powder-calloy C Thickness (one ring) 0.135 in. (3.43 mm)									
Coil Power Pressure Limits Mounting Junction Enclosure Material Grounding Ring Material (optional, 2 required)	Pulsed DC In Accordance with ANSI/ASME, Direct detector mount or remote For remote mounted amplifier of 316 stainless steel (standard) or Meter Size 1/410 in. (6250 mm) 1012 in. (250600 mm)	e wall mount, bracket included. sption: Cast aluminum, powder-calloy C Thickness (one ring) 0.135 in. (3.43 mm) 0.187 in. (4.75 mm)	coated paint, NEMA 4X/6P (IP66/IP67)								
Coil Power Pressure Limits Mounting Junction Enclosure Material Grounding Ring Material	Pulsed DC In Accordance with ANSI/ASME, Direct detector mount or remote For remote mounted amplifier of 316 stainless steel (standard) or Meter Size 1/410 in. (6250 mm)	e wall mount, bracket included. sption: Cast aluminum, powder-oalloy C Thickness (one ring) 0.135 in. (3.43 mm) 0.187 in. (4.75 mm) /platinum plated, tantalum, or p	coated paint, NEMA 4X/6P (IP66/IP67)								

DIMENSIONS

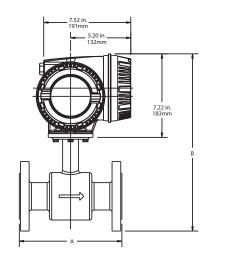

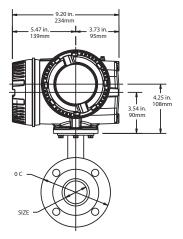

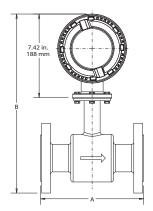


Figure 1: M3000 Meter Mount

Figure 2: M3000 Remote Mount Junction Box on Detector

Size		A		В		С		D		Est. Weight with Amplifier		Flow Range				
												GPM		LPM		
inch	mm	inch	mm	inch	mm	inch	mm	inch	mm	lb	kg	min	max	min	max	
1/4	6	6.7	170	13.4	342	3.5	89	13.9	351	17	7.7	0.01	5	0.05	20	
5/16	8	6.7	170	13.4	342	3.5	89	13.9	351	17	7.7	0.02	10	0.09	36	
3/8	10	6.7	170	13.4	342	3.5	89	13.9	351	17	7.7	0.04	15	0.14	57	
1/2	15	6.7	170	13.4	342	3.5	89	13.9	351	17	7.7	0.08	34	0.32	127	
3/4	20	6.7	170	13.6	347	3.9	99	14	356	17	7.7	0.12	48	0.46	183	
1	25	8.9	225	13.8	352	4.3	108	14.2	361	18	8.8	0.21	84	0.79	318	
1-1/4	32	8.9	225	14.6	372	4.6	117	15	381	20.3	9.2	0.39	157	1.5	594	
1-1/2	40	8.9	225	14.8	376	5.0	127	15.2	386	22	10	0.55	220	2.1	834	
2	50	8.9	225	15.3	389	6.0	152	15.7	398	26	11.7	0.94	378	3.6	1431	
2-1/2	65	11.0	280	16.5	420	7.0	178	16.9	429	35	15.7	1.63	653	6.2	2471	
3	80	11.0	280	16.7	426	7.5	191	17.2	435	38	17.1	2.21	883	8.4	3344	
4	100	11.0	280	17.8	452	9.0	229	18.2	461	49	22.1	3.30	1320	12	4997	
5	125	15.8	400	19	484	10.0	264	19.4	493	60	27.1	5.29	2115	20	8008	
6	150	15.8	400	20	510	11.0	279	20.4	519	71	32.1	7.85	3141	30	11890	
8	200	15.8	400	21.9	558	13.5	343	22.9	583	96	43.1	15.69	6278	59	23765	
10	250	19.7	500	26.2	677	16.0	406	26.6	676	130	59.1	25.05	10021	95	37934	
12	300	19.7	500	28.3	720	19.0	483	28.7	729	219	99.3	33.61	13445	127	50894	
14	350	19.7	500	30.2	768	21.0	533	30.7	779	287	130.2	45.75	18300	173	69272	
16	400	23.6	590	33.1	842	23.5	597	33.5	851	354	160.9	59.75	23902	226	90477	
18	450	23.6	590	34.4	876	25.0	635	34.9	885	409	185.3	75.63	30250	286	114511	
20	500	23.6	590	337.6	955	27.5	699	38	964	502	228.3	93.37	37346	353	141371	
22	550	23.6	590	39	991	29.5	749	39.4	1000	532	241.3	112.97	45189	428	171059	
24	600	23.6	590	41.6	1057	32.0	813	42	1066	561	255.3	134.45	53779	509	203574	

PART NUMBER CONSTRUCTION

M3000 for hazardous class 1, division 2 environments

M3									-	-			- XX		
M3000	Meter				Detector				Electrodes &	Amplifier	Remote Cable	Communications/		Unit of Measure	Testing &
MSGGG	Туре	HARD RUBBER C-Steel 150# flanges	HARD RUBBER Stainless Steel 150# flanges	PTFE C-Steel 150# flanges	PTFE Stainless Steel 150# flanges	PFA Stainless Steel 150# Flange	HALAR C-Steel 150# flanges	HALAR Stainless Steel 150# flanges	Grounding	7 unpinier	Length	Outputs	Method	Totalizer/ Flow Rate	Tagging
Meter Type- Sta	ndard LL	R1	R4	P1	P4	PA	H1	H4							
1/4" 5/16"	002 003	N/A N/A	N/A N/A	N/A N/A	N/A N/A	_	N/A N/A	N/A N/A							
3/8"	004	N/A	N/A	N/A	N/A	_	N/A	N/A							
1/2" 3/4"	005 007	N/A	N/A	_	_	N/A	N/A	N/A							
1"	010	N/A	N/A —	_	_	N/A N/A	N/A N/A	N/A N/A							
1-1/4"	012	-	_	_	_	N/A	N/A	N/A							
1-1/2"	015 020	-	_	_	_	N/A N/A	N/A N/A	N/A N/A							
2-1/2"	020	_	_	_	_	N/A N/A	N/A N/A	N/A N/A							
3"	030	_	_	_	_	N/A	N/A	N/A							
4" 5"	040	_	_	_	_	N/A	N/A	N/A							
6"	050 060	_	_	_	_	N/A N/A	N/A N/A	N/A N/A							
8"	080	-	_	_	_	N/A	N/A	N/A							
10"	100	-	_	_	_	N/A	N/A	N/A							
12" 14"	120 140	_	_	_	_	N/A N/A	_	_							
16"	160	_	_	_	_	N/A	_	_							
18"	180 200	-	_	_	_	N/A	_	_							
20" 22"	200 220	_	_	_	_	N/A N/A	_	_							
24"	240	& Grounding	_	_	_	N/A	_								
	Platinum Pla Tantalum w Platinum/Rl Alloy C Elect Stainless Ste Platinum Pla Tantalum El Platinum/Rl Amplifer T 110/220V A 24V DC; Met 24V DC; Met 24V DC; Met 24V DC; Met 35 ft. Standa 10 ft. Standa 55 ft. Standa 75 ft. Standa	C; Meter Mounted C; Remote Mounted ter Mounted note Mounted note Mounted bie Length rd Cable ard Cable tract	ss Steel Grounding A Grounding Rings nless Steel Groundin Electrode unding Electrode ounding Electrode ounding Electrode Grounding Electrode Grounding Electrode	ings q Rinqs					S P T R C D G L H	M R E F	WW AA AB AC AF AK AR BW	S M	xx		
	Gallons/cub Cubic Meter Cubic Meter Cubic Meter Cubic Feet/ Cubic Feet/ Liters/gallor Liters/liters Liters/liters Liters/liters Liters/liters Acre Feet/g Second-Foo Custom Uni Testing & T Featory Call	per minute per hour ons/gallons per minut ions gallons per day els per day* allons per minute tt Day/cubic feet per sts 'aqqing brated	econd inute our r											B C E T H F J K L N P Q M R U A S Z	F
	3rd Party Ca	alibrated brated/Stainless Steel	l Tao												3 S
	3rd Party Ca	librated w/ Stainless !	Steel Tag												T
				-							-			·	

^{*}Available with Communications/Outputs option "M" Only

Control. Manage. Optimize.

ModMAG is a registered trademark of Badger Meter, Inc. Other trademarks appearing in this document are the property of their respective entities. Due to continuous research, $product improvements \ and \ enhancements, Badger \ Meter \ reserves \ the \ right \ to \ change \ product \ or \ system \ specifications \ without \ notice, \ except \ to \ the \ extent \ an \ outstanding$ contractual obligation exists. © 2023 Badger Meter, Inc. All rights reserved.