

Ultrasonic Flow Sensors

RS-900w Polymer

DESCRIPTION

Measuring very low flow rates, the RS-900w Polymer Ultrasonic Flow Sensor is well suited for mixed zone irrigation applications: drip, rotors and spray heads. The simple design makes the sensor installation straightforward and cost effective.

Benefits

- Measure a wide flow range accurately and cost effectively
- Easy to install single-piece threaded body
- Low maintenance—robust, no moving parts
- Compatible with irrigation controllers, including the FC-5000 flow display from Badger Meter
- · No straight-run requirements

Features

- Three sizes with NPT or BSP tapered threads
- Forward flow accuracy ± 2% of reading
- 200 psi (13.8 bar) pressure rating
- Submersible IP 68 with fully potted electronics
- No moving parts to wear
- NSF/ANSI/CAN 61 and 372 certified option
- Same two-wire power/pulse output as impeller flow sensors
- Forward and reverse flow flashing LED indicators

APPLICATIONS

Managing water usage in irrigation requires reliable flow sensoring. The wider the flow range and more accurate the sensor, the easier it is to detect leaks and respond quickly. As a critical part of water management, the RS-900w flow sensor reads consistently and does not degrade over time due to wear and tear.

- Commercial turf irrigation
- Golf course irrigation
- Agricultural irrigation
- Irrigation pump stations




OPERATION

The RS-900w flow sensor transmits ultrasonic signals through the moving water to measure the velocity of the water flow. Two transducers generate and receive the ultrasound signals; one signal moving upstream and the other downstream. The difference in the transit time equates to the velocity of water flowing through the pipe. The sensor will not measure flow in partially filled or empty pipes.

SENSOR INSTALLATION

The RS-900w flow sensor is submersible and can be installed in horizontal or vertical pipes. To ensure the pipe is completely full, flow should be in the up direction in vertical pipes. Straight runs before or after the sensor are not required.

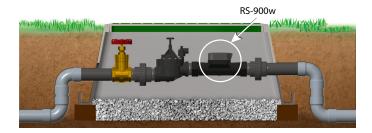



HYB-DS-03507-EN-04 (January 2023)


SPECIFICATIONS

Materials	Body: glass filled nylon Upper: polyphenylene oxide						
Sizes	1 in. female taper threaded (NPT or BSP)						
	1-1/2 in. female taper threaded (NPT or BSP)						
	2 in. female taper threaded (NPT or BSP)						
Flow Range & Accuracy	Normal Flow Range			Extended Low Flow Range			
,	Sensor Size	Flow Range		Flow Range Accuracy			
		gal/min (liters/min)	Accuracy	gal/min (liters/min)	gal/min (liters/min)		
	1 in.	1.3050.0 (4.92189)	± 2% of reading	0.261.30 (0.984.92)	± 0.05 (± 0.19)		
	1-1/2 in.	3.09125 (11.7473)	± 2% of reading	0.623.09 (2.3511.7)	± 0.13 (± 0.47)		
	2 in.	5.13200 (19.4757)	± 2% of reading	1.035.13 (3.9019.4)	± 0.20 (± 0.76)		
LED Indicators	Power (On/Off indication)						
	Reverse Flow (Flashing proportional to flow rate)						
	Forward Flow (Flashing proportional to flow rate)						
Pressure Rating		200 psi (13.8 bar) working pressure					
Fluid Temperature		32140° F (060° C)					
Ambient Temperature		32140° F (060° C)					
Power/Output	Supply voltage = 8V DC min; 28V DC max.						
	Quiescent current = 600 μA (typical)						
	OFF state (VHigh) = Supply voltage – (600 μA * Supply impedance)						
	ON state (VLow) = 1.2V DC @ 40 mA (15 Ω + 0.7V DC)						
Output Frequency	0.5200 Hz						
Output Pulse Width	5 msec +25%	5 msec ±25%, 50% duty cycle above 100 Hz					
Environmental	Suitable for outdoor use below grade						
	IP 68 / NEMA 4X						
Suitable for use in submerged installations (< 3 ft water, 24 hours)							
	Suitable for pollution degree 4 environments Altitude: <2000 m (6560 ft)						
	Relative Humidity: 090%, non-condensing						
Electrical Cable				PTI C wire provided for con	nection to display.		
	4 ft of 2-conductor AWG 18 drain wire; shielded UL type PTLC wire provided for connection to display, monitor or controller; rated to 221° F.						
	May be extended to a maximum of 2000 feet with 20 AWG (or larger) copper wire suitable for direct						
	burial, or appropriate for installation.						
Water System Certification	NSF/ANSI/CA	NSF/ANSI/CAN 61 and 372 certified option					
Compliance	CE EMC Direc	CE EMC Directive 2014/30/EU					

PHYSICAL DIMENSIONS

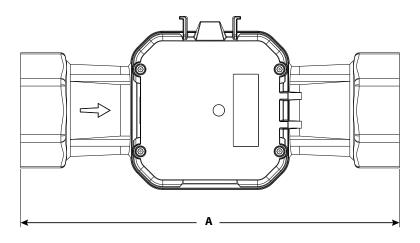

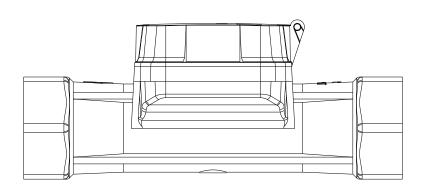

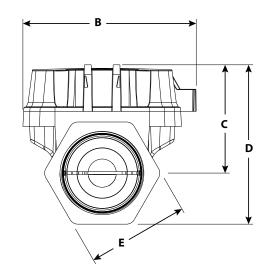


Size	Α	В	С	D	E
1 in.	10.57 in. (268.5 mm)	4.84 in. (123.0 mm)	2.88 in. (73.2 mm)	3.75 in. (99.3 mm)	1.75 in. (44.5 mm)
1-1/2 in.	10.57 in. (268.5 mm)	4.84 in. (123.0 mm)	3.02 in. (77.0 mm)	4.25 in. (108.0 mm)	2.5 in. (63.5 mm)
2 in.	10.57 in. (268.5 mm)	4.84 in. (123.0 mm)	3.02 in. (77.0 mm)	4.45 in. (113.0 mm)	2.85 in (72.4 mm)

PART NUMBERS


Description	Part Number
RS-900w flow sensor, 1 in. NPT tapered threads	D8-C-010NAAP9-SSBMXX
RS-900w flow sensor, 1-1/2 in. NPT tapered threads	D8-C-015NAAP9-SSBMXX
RS-900w flow sensor, 2 in. NPT tapered threads	D8-C-020NAAP9-SSBMXX
RS-900w flow sensor, 1 in. NPT tapered threads, NSF certified	D8-C-010NAAP9-SSBMNS
RS-900w flow sensor, 1-1/2 in. NPT tapered threads, NSF certified	D8-C-015NAAP9-SSBMNS
RS-900w flow sensor, 2 in. NPT tapered threads, NSF certified	D8-C-020NAAP9-SSBMNS
RS-900w flow sensor, 1 in. BSP tapered threads	D8-C-010BBAP9-SSBMXX
RS-900w flow sensor, 1-1/2 in. BSP tapered threads	D8-C-015BBAP9-SSBMXX
RS-900w flow sensor, 2 in. BSP tapered threads	D8-C-020BBAP9-SSBMXX
RS-900w flow sensor, 1 in. BSP tapered threads, NSF certified	D8-C-010BBAP9-SSBMNS
RS-900w flow sensor, 1-1/2 in. BSP tapered threads, NSF certified	D8-C-015BBAP9-SSBMNS
RS-900w flow sensor, 2 in. BSP tapered threads, NSF certified	D8-C-020BBAP9-SSBMNS

PRESSURE DROP CHARTS

Flow (gal/min.)

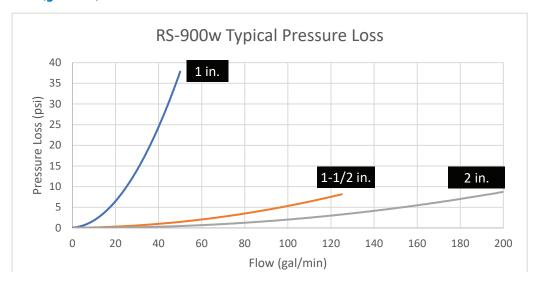

Flow (m³/h)

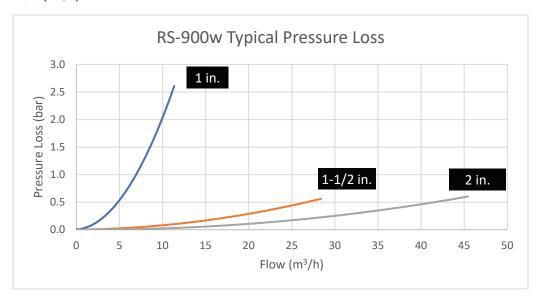

Control. Manage. Optimize.

Dynasonics is a registered trademark of Badger Meter, Inc. Other trademarks appearing in this document are the property of their respective entities. Due to continuous research, product improvements and enhancements, Badger Meter reserves the right to change product or system specifications without notice, except to the extent an outstanding contractual obligation exists. © 2023 Badger Meter, Inc. All rights reserved.